



# Yealink CP965 Conference Phone with CPW65 Expansion Microphones



## Introduction


The Yealink CP965 Conference Phone Supports up to 2 CPW65 DECT Microphones. Manufacturer specifications indicate a 20m range. As the name suggests these are Microphones only and do not include a speaker for ease of hearing at range. To use the Yealink CPW65 your CP965 device must be on Firmware version 143.86.0.10 at a minimum.

## Pairing Process


1. From the Home Screen Press the **More** button




2. Then press **MIC**.

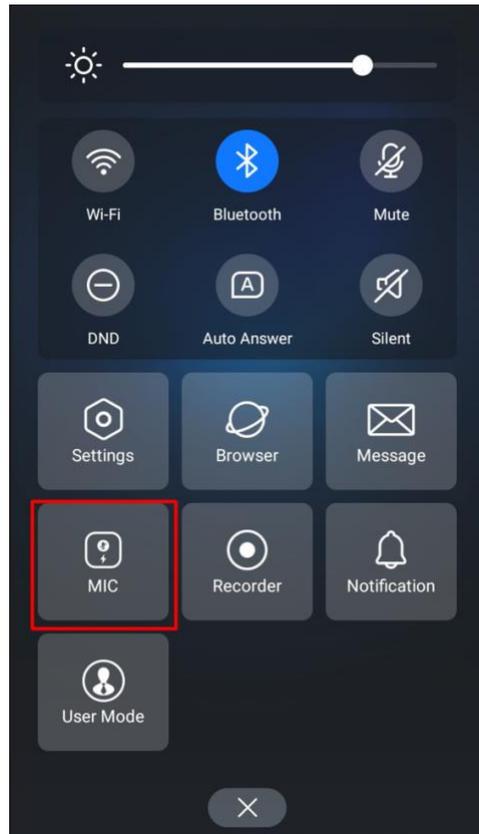

3. Then press the **Pairing Button** on the CP965

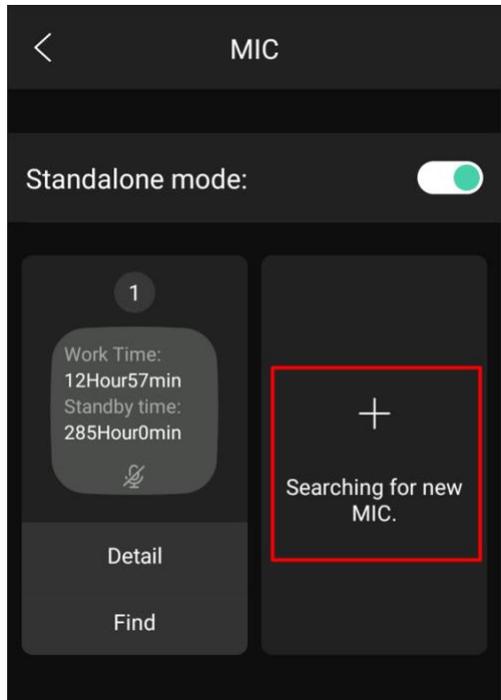

4. The CP965 Conference Phone will then enter pairing mode.

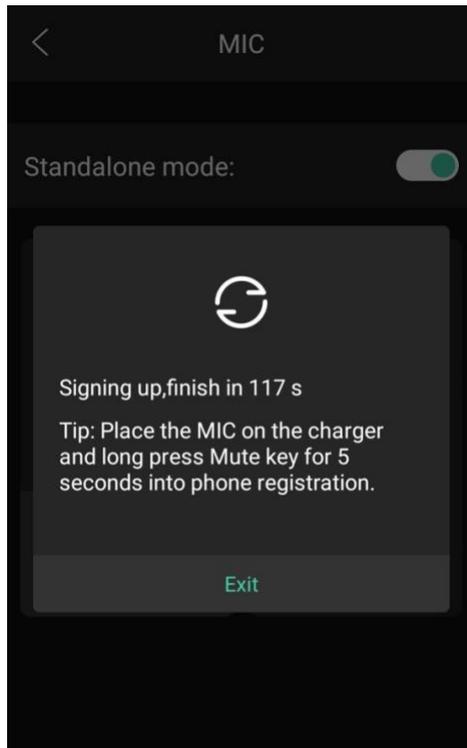


5. Next, do a long press and hold of the **Mute** button on the CPW65 Expansion Microphone until the light begins to rapidly flash yellow.
6. After about 10-15 seconds of flashing the devices should be in sync.




## Microphone Unbinding

1. The Unbinding process should be utilized if you need to replace a microphone or have a scenario with multiple bases sharing microphones near each other.
2. Utilize the **Find** feature outlined below if you are unsure which microphone is which.
3. Tap **Details** on the Microphone you wish to remove.

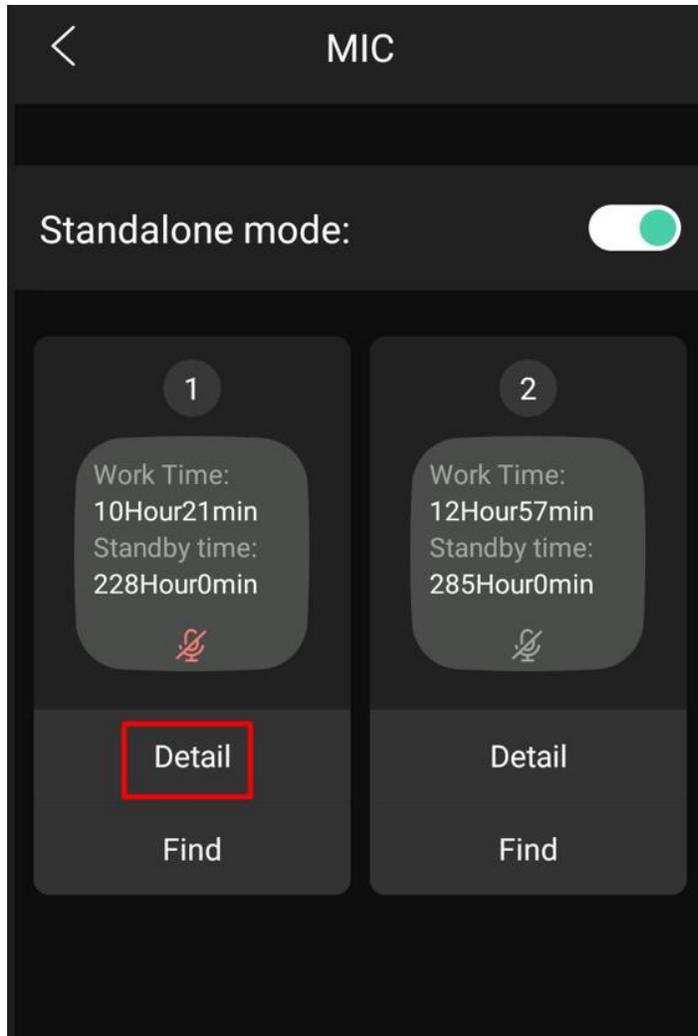


4. This page includes a variety of information about the selected microphone.


5. The **unbind** button is found at the bottom of **Details**.

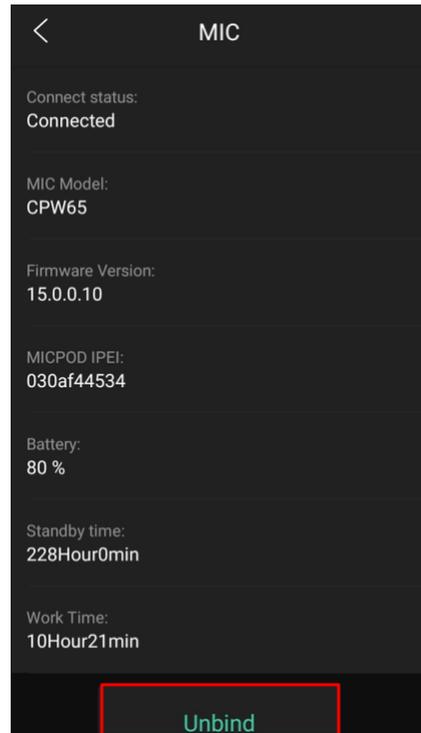

6. Selecting Unbind presents you with a prompt to confirm you wish to unbind that microphone.

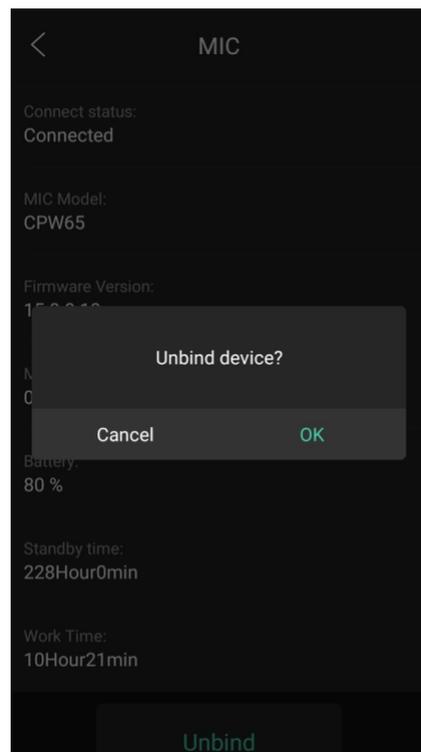

7. Press **OK** and the microphone will become unbound allowing you to perform the pairing process on a new microphone if required.

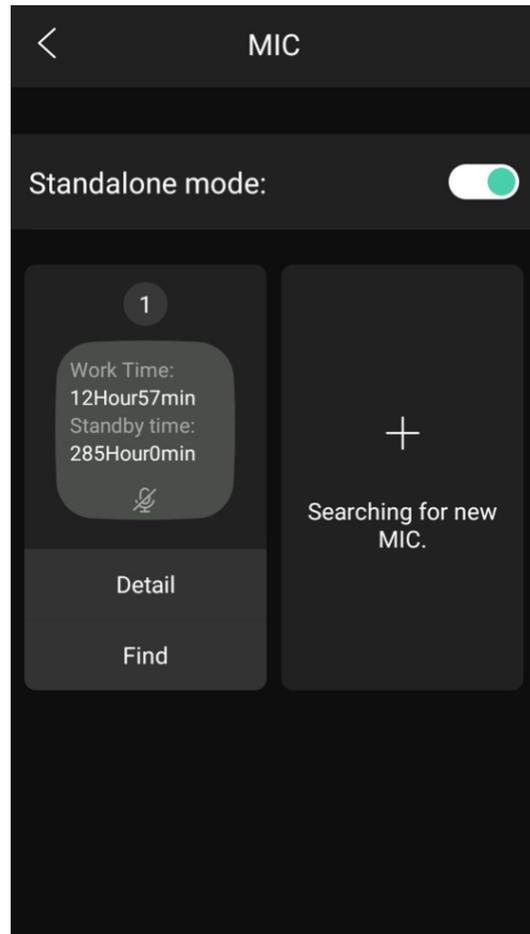

## Microphone Find Feature

This allows a user to visually determine which Microphone is MIC1 and which is MIC2 due to the flashing green/red Mute button.